



## **Recycling/Cleaning Procedure**

Maintenance procedure should be performed after every 200 gun cleanings if you are cleaning metal cups or 400 gun cleanings if not cleaning cups. Clean the system in the morning before the system is used that day. Do not stir the solution prior to cleaning system.

1. Disconnect airline from system.
2. Release pressure from pump and unit by opening valves.
3. Drain solution into buckets. Do not let residue drain into bucket.
4. Clean out basin.
5. Change Pre Filter.
6. Pour solution from buckets back into basin.
7. Reconnect airline.
8. Turn recycle valve on, run for 15 minutes to recycle solution.